

Electric Throw Rug

Instruction Manual



Please read the instructions carefully before use.

Safety Instructions

Carefully Read these Instructions before using this product

- ◆ Ensure that you know how the Electric Throw Rug functions and how to operate it.
- ◆ Maintain the Electric Throw Rug in accordance to these instructions to ensure that it functions properly.
- ◆ Keep this manual handy and if the throw is to be used by a third party ensure that you supply the instructions with it.
- ◆ These safety instructions do not by themselves eliminate any danger completely and proper accident prevention measure must always be used.
- ◆ No Liability can be accepted for any damage caused by non compliance with these instructions for any other improper use or mishandling.
- ◆ Do not use this Electric Throw Rug if it has been damaged in anyway. If the throw is moist, allow it to dry before use.
- ◆ Check this Electric Throw Rug regularly and especially prior to using for the first time or after it has been stored away for a pro-longed period of time for any signs of damage.
- ◆ This product must only be used with the heating control unit supplied. Under no circumstances should you attempt to use a different type of heating control unit with it.
- ◆ Always keep away from naked flames.
- ◆ The Electric Throw Rug is intended for household use only and should not be used for industrial or commercial purposes.
- ◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ◆ This product is not a toy. Supervise young children to ensure they do not play with the product. Close supervision is necessary when any appliance is used by or near children.
- ◆ Do not use the Electric Throw Rug with young children, infirm people or any person who is insensitive to heat.
- ◆ Avoid extended use of this product as a build-up of heat could cause over-heating of the body (heat stroke).
- ◆ Do not use the Electric Throw Rug folded or tucked in.
- ◆ Do not insert pins in the Electric Throw Rug.
- ◆ This product has no user-serviceable parts. Refer all servicing and repairs to a qualified personnel only. Improper repairs may place you at serious risk.

Contents:

1 x 120 x 160cm Electric Throw Rug

1 x Control Unit (attached to the Throw)

1 x Instruction Manual


Confirm all parts before disposing of any packaging.

Instructions for use

Operating instructions

Before first use

- Take the Electric Throw Rug out of its packaging and store or dispose of the packaging responsibly.
- Inspect the cord, plug and controller for damage or wear before each use. Do not use the product if these parts are damaged.
- This product is designed for use as an Electric Throw Rug or over blanket only. Do not sit on it. It must not be used in any way other than described below.
- Drape the heated throw rug over your shoulders or on your lap and smooth out any creases.
- Position the controller close to your hand so you can easily adjust the temperature and time without walking around with the throw rug on.
- Connect the plug into a suitable power socket and switch on the power at the mains. Slide the large switch up from 0 to 1 to operate the controller: the two LED displays will light up.
- Press the left (Temp) button on the controller to select the desired heat setting (1 is the lowest heat setting, 9 the highest). Each press will increase the temp by 1 until you reach 9 (maximum heat) Press again will take you back to 0 (off). It is recommended that 9 is only used for preheating for no longer than 1 hour (and not to be in contact with a person) 4 is recommended for comfortable use as a wrap blanket
- Press the right (Timer) button to set the number of hours (from 1 to 9) for the Electric Throw Rug to stay on, or press until “H” illuminates for continuous heat (for a maximum of 12 hours). Each press will increase the time by 1 hour until you reach 9 Press again will take you H. Press again will take you back to 1.

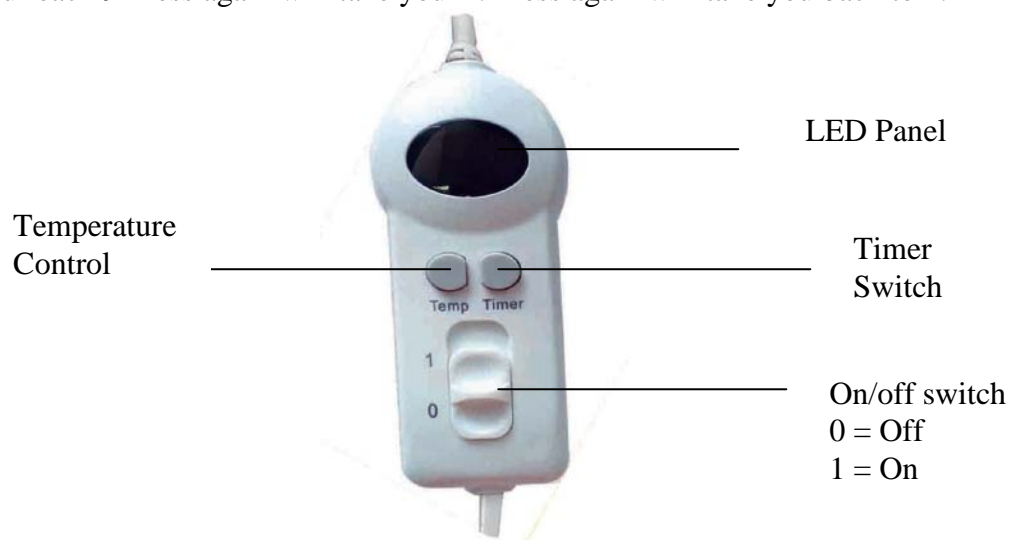

Important notes

- When using the throw for the first time, and after spot cleaning, we recommend operating the Electric Throw Rug for at least two hours to ensure it is completely dry. Ignore any slight odour that may occur on first use.
- Do not sleep with the controller set to maximum heat.
- Switch the controller off when heating is no longer required – do not leave it on indefinitely.

- Do not leave it on overnight
- Unplug the Electric Throw Rug from the mains supply when not in **use**.

Cleaning Instructions

Should your Electric Throw Rug become soiled please follow these instructions.

- ◆ Unplug the Throw from the wall socket and disconnect the controller.
- ◆ Spot cleanable using a damp cloth soaked in a mild detergent.
- ◆ Allow to dry naturally.
- ◆ Do not tumble dry.
- ◆ Do not iron.
- ◆ Do not wring dry or use with cloths pegs.
- ◆ Ensure the control sockets are completely dry before re assembling and using.
- ◆ Further hand or machine wash instruction please refer to the label attached to the Throw Rug.

Storing your Electric Throw Rug

Roll or fold the Electric Throw Rug loosely. Store in a blanket bag or the bag it was supplied in. Avoid pressing sharp creases into the Electric Throw Rug. Do not place heavy objects onto the throw whilst being stored.

Technical Specs: 220-240V~50Hz 100W

Trouble shooting

Led Display does not illuminate when switch is set to 1

- ◆ Check plug is inserted into the wall socket
- ◆ Check wall socket is switched on

Electric Throw Rug is not heating

- ◆ Check the heat control is set to a minimum of 1 and not at 0

Please Retain for future reference.