


Instructions

Operating instructions

Before first use

- Take the Electric Blanket out of its packaging and store or dispose of the packaging responsibly.
- Inspect the cord, plug and controller for damage or wear before each use. Do not use the product if these parts are damaged.
- This product is designed for use only as an under blanket. Secure blanket to bed with fitted skirt.
- Connect the plug into a suitable power socket and switch on the power at the mains. Slide the large switch up from 0 to 1 to operate the controller: the two LED displays will light up.
- Press the left (Temp) button on the controller to select the desired heat setting (1 is the lowest heat setting, 9 the highest). Each press will increase the temp by 1 until you reach 9 (maximum heat) Press again will take you back to 0 (off). It is recommended that 9 is only used for preheating for no longer than 1 hour (and not to be in contact with a person) 4 is recommended for comfortable use as a wrap blanket
- Press the right (Timer) button to set the number of hours (from 1 to 9) for the Electric Blanket to stay on, or press until "H" illuminates for continuous heat (for a maximum of 12 hours). Each press will increase the time by 1 hour until you reach 9 Press again will take you H. Press again will take you back to 1.

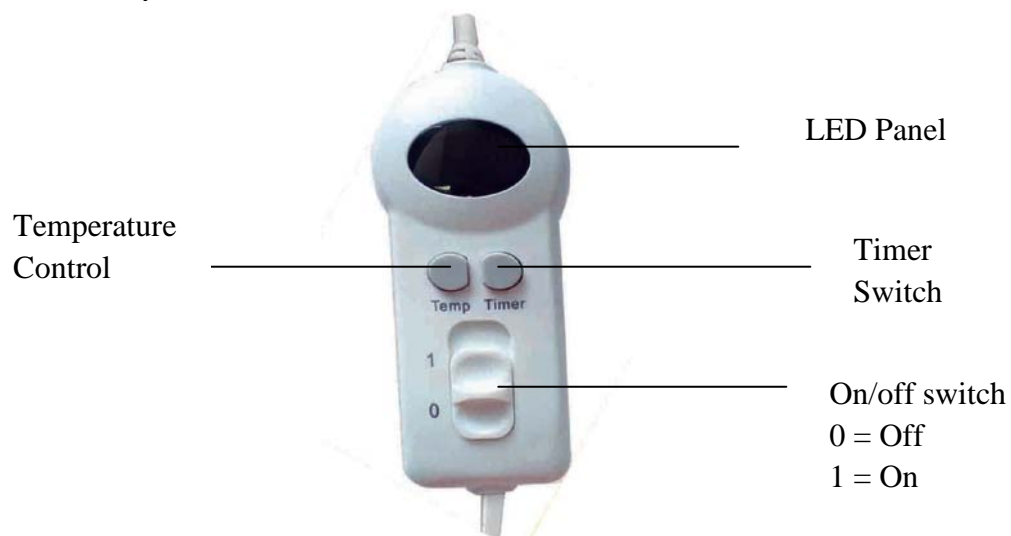

Important notes

- When using the electric blanket for the first time, and after spot cleaning, we recommend operating the Electric Blanket for at least two hours to ensure it is completely dry. Ignore any slight odour that may occur on first use.
- Do not sleep with the controller set to maximum heat.
- Switch the controller off when heating is no longer required – do not leave it on indefinitely.
- Do not leave on overnight
- Unplug the Electric Blanket from the mains supply when not in **use**.